http://www.samsungelectronics.com.hk

## Service centre

Samsung Customer Service Centre
11/F Phase 2, MTL Warehouse Building
Berth One, Kwai Chung, NT, Kowloon, Hong Kong
Tel: 28626001
Fax: 28626971
e-mail: service@sehk.samsung.com

AH68-00966E

DIGITAL AUDIO PLAYER

yepp

YP-700

- 2X MP3
- Memory Expansion Slot
- MP3 & WMA Playback
- FM Remote Controller(Option)
- Voice Recording Function
- High Speed USB
- D.I.Y. Support
- Upgradeable

# SAFETY(Charger)

Safety symbols information

This symbol indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The symbol calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electic shock, match wide blade of plug to wide slot, and fully insert.



# Using the Charger

- A charger is provided with yepp.
- Use only approved battery and charger.

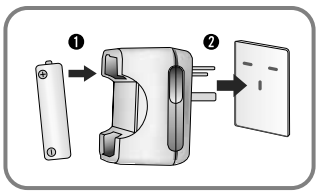


***1*** Insert the rechargeable battery into the battery slot.
- ✵ Make sure that you put the polarity of the battery in the right direction.

***2*** Plug the charger into a wall outlet.
- ✵ The charger should be used at right power source. (refer to the label on charger)
- ✵ Red light indicates that battery is being charged.
- ✵ Green light indicates that battery is fully charged after charging about 4 hours.
- ✵ When light color changes to green, remove the rechargeable battery from the charger within one hour.

**Warning :**
- Never use any charger or battery that is damaged in any way.
- After charging the rechargeable battery, disconnect charger from power source.
- Do not overload the outlet or extension cords.
- The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- Don't charge the rechargeable battery over 24 hours.
- Overcharging or overdischarging will shorten the life of the rechargeable battery.
- To use the rechargeable battery for long time, repeat full charging and full discharging.
- When using the rechargeable battery for the first time or when left unused for a long time, charge it fully before using it again.
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery. Short-circuiting the terminals may damage the battery.

# Contents


## Preparations

SAFETY(Charger) ..... 2
Using the Charger ..... 3
Features ..... 6
Components ..... 9
Location of Controls (yepp) ..... 10
Location of Controls (Remote Controller) ..... 12
Inserting the Battery ..... 14
Using the SmartMedia Card ..... 15

## Basic Usage

Listening to Music with yepp ..... 16
Setting up Volume/Hold Functions ..... 17
Changing Modes ..... 18
Recording Voice ..... 19
Searching for Music/Voice Files ..... 20
FM Listening Function(Option) ..... 22

## Additional Usage

Loop Repeating ..... 24
Setting up MENU ..... 25
Repeating Tracks ..... 26
Setting up EQ ..... 28
Managing Files ..... 30
Customizing Options (Display) ..... 34
Searching Quickly For Music/Voice Files ..... 37

## Connection to Computer

Connecting yepp to PC ..... 38
Manual Installation of USB Driver ..... 42
Connecting yepp to Mac ..... 46

## Software Usage

How to use yepp Explorer ..... 49
Copying Files to yepp (PC) ..... 50
Downsizing MP3 ..... 52
Copying Files to yepp (Mac) ..... 54
Deleting Files (PC) ..... 56
Deleting Files (Mac) ..... 57
Formatting (PC) ..... 58
Formatting (Mac) ..... 59
Uploading Files (PC) ..... 60
Uploading Files (Mac) ..... 61
Rearranging Files ..... 62
Installing CD Ripper ..... 63

## Appendix

Description of Buttons (yepp player) ..... 64
MENU Table ..... 66

## Customer Support

Precautions ..... 68
Troubleshooting ..... 69
Security ..... 70
Specifications ..... 71

DIGITAL SOUND yepp

**Farewell to shortage**

## 2X MP3

MP3 compression technology that allows you to downsize your MP3 files via software.

**Expectation**

## Upgradeable

You can upgrade the built-in programs if necessary.

ex) Add functions, CODEC, etc.
Please refer to the yepp home page (http://www.samsungelectronics.com.hk) when you need to upgrade your yepp.

**Endless Dream for Expansion**

## Memory Expansion Slot

You can expand 8MB~128MB by adding a SmartMedia card.

DIGITAL SOUND yepp

**Polyphagous player**

## MP3 & WMA Playback

MP3 is an MPEG1 Layer3 audio format.
WMA is a Microsoft Windows Media audio format.

**Joy of Life**

## FM Remote Controller(Option)

Capable of storing 5 stations

**My yepp**

## D.I.Y.

- Setting up EQ
- Decorating LOGO
- Changing LCD Font
- Adjusting Scroll speed
- Adjusting Contrast

# DIGITAL SOUND yepp

**Powerful yepp'**

## Playing Time

This unit uses a NI-MH rechargeable battery
Operation can last 20 hours (AAA alkaline battery + rechargeable battery)

**The Light of the Light**

## Backlight

Blue-color backlight

**Wow!**

## High Speed USB

Download speed Max. 5Mbps

**Exciting**

## Sound

You can adjust equalizer manually.

**Making Valuable Record**

## Voice Recording Function

Suitable for recording lectures and meetings

# Components

yepp

Player

Remote Controller

Earphone

USB Cable

Installation CD

User's Guide



Charger (Option)



Rechargeable Battery (1.2V NI-MH)(Option)

Battery Pack

Carrying case

| Model | YP-700i | YP-700H | YP-700S |
|---|---|---|---|
| Built-in memory | 192MB | 128MB | 64MB |

- SmartMedia Card(3.3V) and Disposal Battery(AAA type) are not included.
- Design of accessories is subject to change for improvement without notice.

# Location of Controls (yepp)

## Front

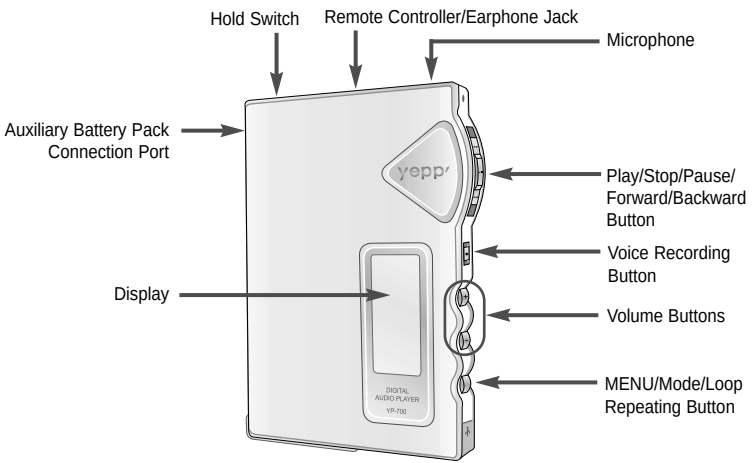


## Rear

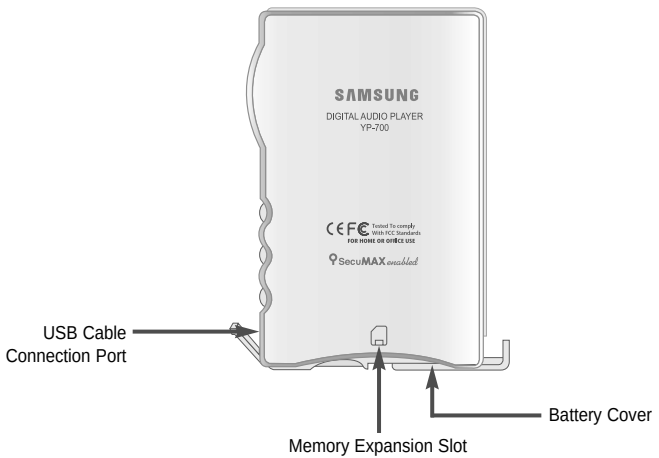

# Location of Controls (Remote Controller)

## Models with FM
(Option)

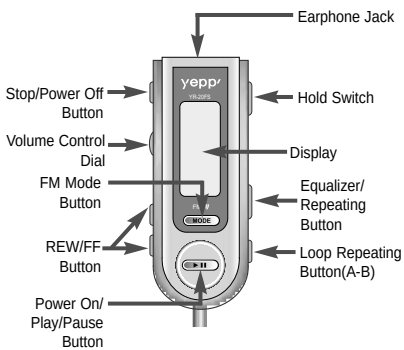


## Model without FM
(Option)

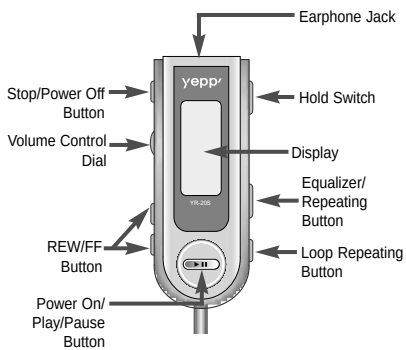


## Display

Player

Remote Controller

## Remote Controller Connection

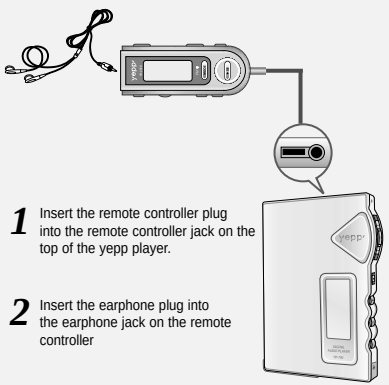

1 Insert the remote controller plug into the remote controller jack on the top of the yepp player.

2 Insert the earphone plug into the earphone jack on the remote controller

# Inserting the Battery

## Using the Rechargeable Battery

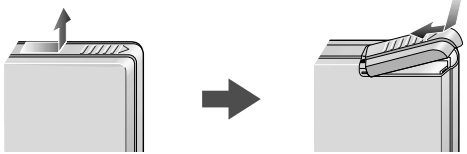

**1** Open the battery cover by pushing it in the direction of the arrow.

**2** Insert the battery into the groove and make sure that you put the polarity of the battery in the right direction. Close the battery cover by pushing it in the direction of the arrow.

## Using a Disposal Battery

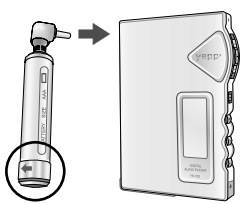

**1** Open the battery pack cover in the direction of arrow.

**2** Insert the battery correctly and close the battery pack cover.

**3** Plug the battery pack into the extension battery connection port.



# Using the SmartMedia Card

Your yepp player allows you to expand memory capacity by adding a SmartMedia card.

**Inserting the SmartMedia card**

**Ejecting the SmartMedia card**

**1** Insert the SmartMedia card into the memory expansion slot on your yepp player in the direction of the arrow.

**2** Confirm the SmartMedia card mark is displayed on the display.

**3** Push the SmartMedia card again in the direction of the arrow to take out the SmartMedia card from the slot.

**Note :**

- Do not insert/eject the SmartMedia card during playback of music/voice files.
- Make sure to turn off the player before inserting/ejecting the SmartMedia card.
- Use 3.3V SmartMedia cards only.
- SmartMedia cards of 8MB~128MB can be used.
- Do not touch the metal face of the SmartMedia card.



**3.3V**

# Listening to Music with yepp

First, insert a battery and connect the earphones and the remote controller to the player.

## Playing Music
**(Power On)**

When you press the ▶/■ button(yepp player)/ the ▶II button(remote controller), the yepp logo appears and a music/voice file is played.

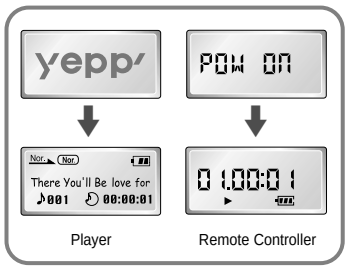


**Note :**

- If the ▶II button on remote controller is pressed while playing, yepp is paused.
- WMA file can be played only at a bit rate between 48Kbps and 192Kbps.[supplied by Windows Media Player (Ver 8.0)]

## Stopping Music
**(Power Off)**

When you press the ▶/■ button (yepp player) or the ■ button(remote controller) while playing, the music stops.
If no buttons are pressed within 5 seconds, the yepp automatically powers off.

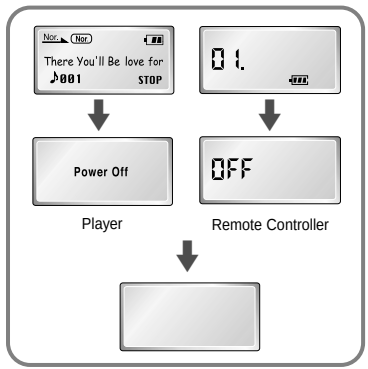




# Setting up Volume/Hold Functions

## Adjusting the Volume

Press the + / − button on the side of the yepp player to adjust the volume while playing.

**Note :** Volume ranges from 00 to 30.

- Press briefly to adjust step by step.
- Press and hold to adjust continuously.

## HOLD Function

Under Hold mode, no buttons work.

### HOLD function on the player

**Slide the HOLD switch on the player in the direction of the arrow.**

- Then no buttons on the yepp player will work. Only the remote controller buttons will work.
- When a button is pressed, "Hold" message will appear on the display.
- The 🔒 mark will appear on the display.

### HOLD function on the remote controller

**Slide the HOLD switch on the remote controller in the direction of the arrow.**

- The 🔒 mark will appear on the display. No buttons on the remote controller will work. (Volume control dial will work.) Only the yepp player buttons will work.

# Changing Modes

Press the **MODE** button on the yepp player or the **A-B** button on the remote controller in STOP mode.

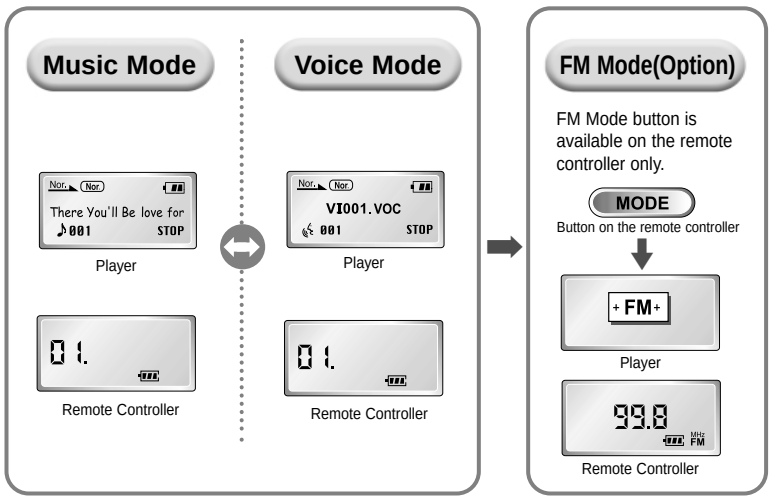




# Recording Voice

## To Record Voice

**1** Press the **REC** button(player) in STOP mode.
- Use the ◄◄/►► button to select built-in memory/SmartMedia card and start recording using the **REC** or ►/■ button

**2** Press the ►/■ button to pause while recording.
Press the ►/■ button again to resume recording.

**3** Press the **REC** button to stop recording.
A new voice file is created.
- The Voice messages are recorded on the built-in memory in order of VI001, VI002...., or they will be recorded on the SmartMedia card in order of VS001, VS002....

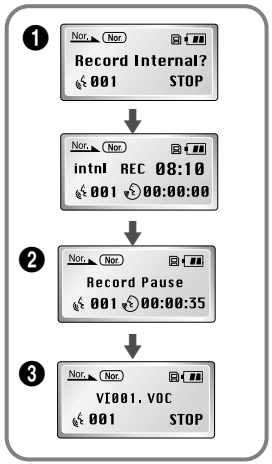


**Note :**
- When the recording function does not work well, format the relevant memory first before starting recording again.
- Voice recording function button is available on the player only.
- Do not take out or insert the SmartMedia card while voice recording is under way.
- When memory is full, recording stops automatically.

(The available time is displayed on the right of display(player) when recording begins.)

# Searching for Music/Voice Files

**Note :**

- With VBR files, pressing the ◄◄ button within the first 5 seconds of the start of track may not result in the previous track playing.
- With VBR files, the actual running time may differ from that of the player display.
- VBR(Variable Bit Rate) file: MP3 file whose compression rate changes when played.

## Searching for Specific Parts in PLAY Mode

Press and hold the ◄◄ / ►► button while playing to find the part you want to listen to.
Release the ◄◄ / ►► button to resume playing.

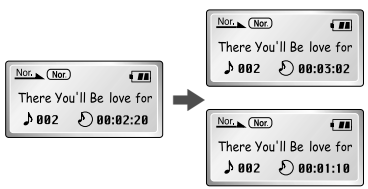


## Searching for Music/Voice Files in PLAY Mode.

Press the ►► button briefly while playing to advance to the next track.
Press the ◄◄ button briefly within 5 seconds from the start of the track to play the previous track. Press the ◄◄ button briefly after 5 seconds from the start of the track to play the beginning of the current track.

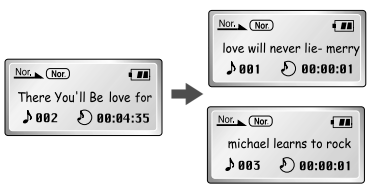


## Searching for Music/Voice Files in STOP Mode.

Press the ◄◄ / ►► button in STOP mode to skip to the previous or next track.
Press the ►/■ button to play.

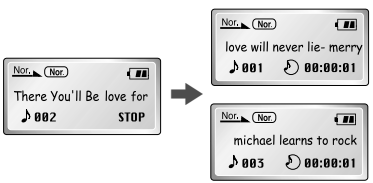

# FM Listening Function(Option)

Turn on the power of yepp and connect the remote controller.

## Switching to FM Mode

Press the **MODE** button on the remote controller.

Player

Remote Controller

## Automatic Searching for FM Frequency

Press and hold the ◄◄/►► button on the remote controller.

- Auto search for frequency will start.

Remote Controller

## Manual Searching for FM Frequency

Press the ◄◄/►► button briefly on the remote controller.

- Manually set the frequency that you want.

Remote Controller

**Note :**

- Only buttons on the remote controller will work in the FM mode.
- In FM mode, you can't connect yepp to a computer.
- Backlight function of the remote controller display will not work in the FM mode.
- To exit FM mode, press the **MODE** button.



## To Save a Radio Station

**1** Press the **EQ/REP** button on the remote controller for the radio station frequency that you want to store.

**2** Press the **A-B** button to select the location to save.

**3** Press the **EQ/REP** button to save a Radio Station.

Select the location to save a Radio Station

A-B

- Select one of the following locations: a, b, c, d, or e

Save a Radio Station

EQ/REP

- The radio station frequency is saved in the chosen location

**Note :**

- Up to five stations(a, b, c, d, and e) can be saved.
- You can replace one station with another at each saved location, but it is not possible to delete a saved station.
- Press the **A-B** button to access the saved location directly.

# Loop Repeating

## Loop Function

### Starting Point

While playing music/voice files, press the **MODE** button briefly (yepp player)/ the **A-B** button (Remote controller) at the beginning of the loop you want to set.

(A) flickers in the display.

### Ending Point

Press the **MODE** button briefly (yepp player)/ the **A-B** button (Remote controller) at the end of the loop.

(A B) appears in the display.
The loop is played repeatedly.

**Note :**
Press the **MODE** button briefly (yepp player)/ the **A-B** button (Remote controller)to cancel the loop.



# Setting up MENU

**Press and hold the MODE button on the yepp player to switch to MENU mode.**
Use the ►/■ button to select and the ◄◄/►► button to move.
Press the **MODE** button one more time to cancel the **MENU** mode.

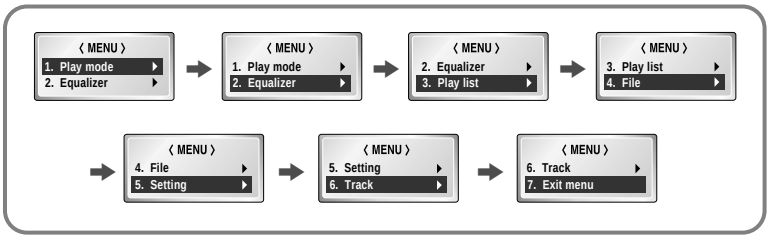


- **Play mode** : To select track repeating mode.
- **Equalizer** : To use equalizer function.
- **Play list** : To select files to listen to.
- **File** : To delete or format music/voice files.
- **Setting** : To change the basic setup options of the display.
- **Track** : To search for the file quickly.
- **Exit menu** : To exit **MENU.**

**Note :**
- In **MENU**, **Go up** can be used to exit the current setting.
- In **MENU** mode, no input for 10 seconds will cancel the **MENU** mode.

# Repeating Tracks

## Track Repeating Function On the yepp Player

**1** In **MENU**, select **1.Play mode**.

**2** In **PLAY MODE**, use the ◄◄/►► button to move to the mode you want and press the ►/■ button to select.

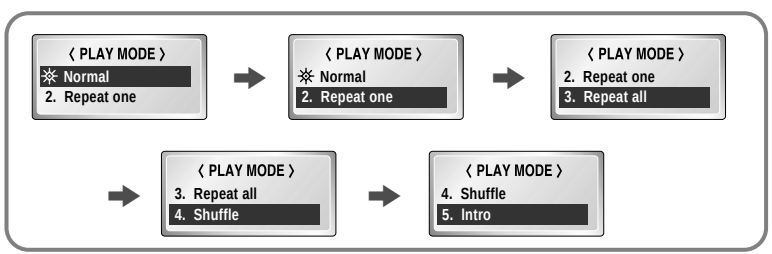


- **Normal**: To play all the tracks in order one time. Nor.
- **Repeat one**: To repeat one track. One
- **Repeat all**: To repeat all tracks. All
- **Shuffle**: To play tracks at random.
- **Intro**: To play the first 10 seconds of each track. intro

## On the Remote Controller

Each time the **EQ/REP** button is pressed and held, the mode will change in order of **REP**, **ALL**, **SHU**, **INT** and **Normal**.

- REP Repeats one track only.
- ALL Repeats all tracks.
- SHU Enables random playback.
- INT Enables yepp to repeat the first 10 seconds of each track.

**Note :**
Normal mode is not indicated on the display.

# Setting up EQ

## EQ Function On the yepp Player

**1** In **MENU**, select **2. Equalizer**.

**2** In **EQ**, use the ◄◄/►► button to move to the setting you want (out of the 8 settings) and press the ►/■ button to select. If you want manual equalizer, select **User** and **Bass/Treble**.

**Note :**

DBB is for Dynamic Bass Booster, which enhances bass response.

## On the Remote Controller

Each time the **EQ/REP** button is pressed, briefly, the mode will change in order of **Classic**, **Jazz**, **Rock**, and **Normal**.

**Note :**

- DBB and User cannot be accessed with the remote controller.
- Normal mode is not indicated on the display.

Continued...

## Editing Play List

**1** In **MENU**, select **3. Play list**

**2** In **PLAY LIST**, select the mode (Music or Voice) to edit and select **Edit**.
- Select **Delete** to erase play list.

**3** Move to the file to add to **Play list** and press the ►/■ button to add. The file is added to **Play list**.
- Press the ►/■ button again to cancel.

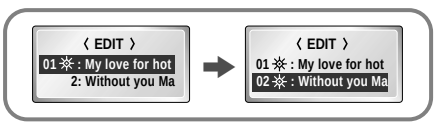


**4** Select **Confirm** to save **Play list**.
- Select **Cancel** not to save **Play list**.






## Listening to Files Selected in Play List

**1** In **MENU**, select **3. Play list**

**2** In **PLAY LIST**, select the mode (Music or Voice) to use Play list and select **On**.

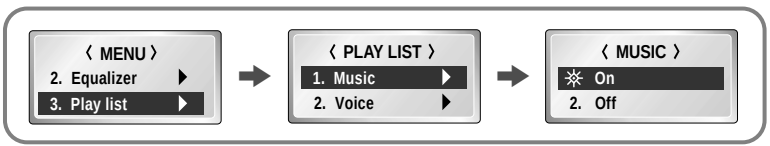


**3** When **Play list** is selected, is displayed on yepp player.
Press the ►/■ button to play the file saved in **Play list.**

## Deleting

**1** In **MENU**, select **4. File**

**2** In **FILE**, select **Delete** and the mode (Music or Voice) the target file is in.

**3** Move to the file to delete and press the ►/■ button to select. The file is deleted.

**4** Select **Go up → Cancel** to exit the mode.

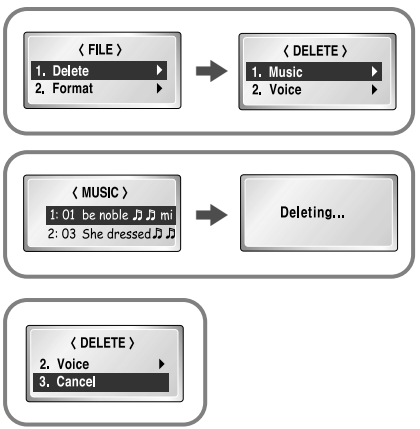


## Formatting

**1** In **MENU**, select **4. File**

**2** In **FILE**, select **Format** and the memory to format.
Select **Cancel** to exit the mode.

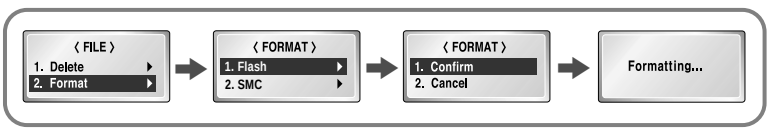


**Note :**

- You can also format in yepp Explorer.
- All files will be deleted when formatting the memory.

# Customizing Options (Display)

Continued...

## Setting Function

**1** In **MENU**, select **5. Setting**

**2** In **SETTING,** use the ◄◄/►► button to move to the function you want to change and select the function by using the ►/■ button.

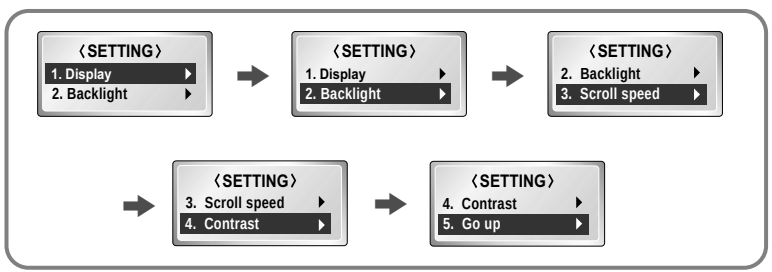


## Display → 1. Information

- **Play time**: displays current play time
- **Remain time**: displays remaining play time
- **Total time**: displays total play time
- **Compression**: displays compression rate 128 Kbps
- **Free memory**: displays remaining memory 12/0 MB FR

## Display → 2. Logo

- **Default**: "yepp" logo
- **User define**: displays user-defined logo
- **None**: displays no logo.

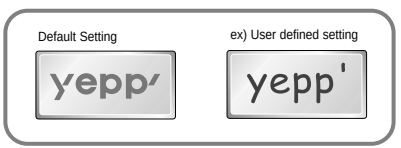


**Note :**

yepp homepage (http://www.samsungelectronics.com.hk) offers a program to edit the user defined logo. You can download from **SUPPORT**.
You can't use yepp logo Editor on Mac.

## Backlight

Press the ◄◄/►► button to set the backlight "ON" time.
When a button is pressed, backlight will stay on for the time you set.

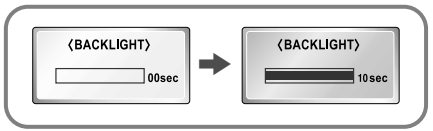


## Scroll speed

Press the ◄◄/►► button to set the scroll speed.

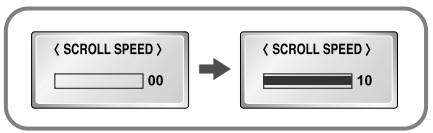


## Contrast

Press the ◄◄/►► button to set the contrast.

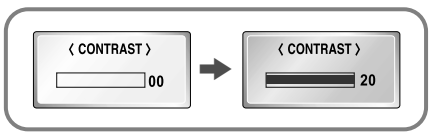




## Track function

**1** In **MENU**, select **6. Track**

**2** In **TRACK**, select the memory or the track to listen to first.
When **Direct flash** is selected, first track in flash memory is played first.
When **Direct SMC** is selected, first track in SMC is played first.

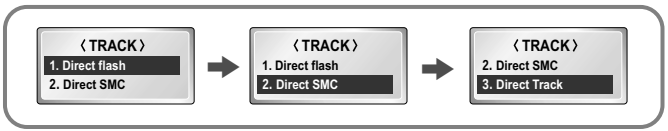


**3** When **DIRECT TRACK** is selected, select the track number by using the ◄◄/►►button. When the ►/■ button is pressed, playback starts from the selected track number.

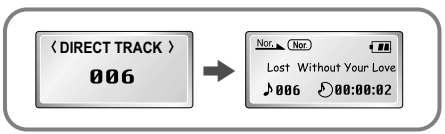

# Connecting yepp to PC

Continued...

## System Requirements.

- Pentium 133MHz or greater
- Windows 98/ME/2000/XP
- 20MB of available hard disk space
- CD-ROM drive
  (double speed or greater)
- USB port supported
- VGA graphic

**Before connecting yepp to PC, make sure to install yepp Explorer.** If "**Add New Hardware Wizard**" appears, press the **[Cancel]** button and install yepp Explorer.

### Installing software

**1** Insert the Installation CD into CD-ROM drive. The window shown below appears. Select **[yepp Explorer Install]**.

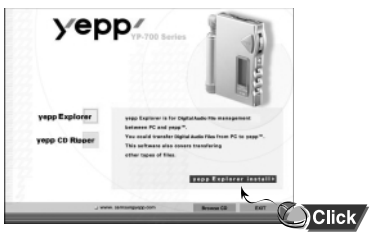


**2** Click **[Next]** in the series of windows that appear.

When installation is completed, connect yepp to PC and use it as shown on next page.

## Connecting yepp to PC with USB cable

**1** Insert the battery into yepp and turn on the yepp.

**2** Plug one end of the USB cable into the USB port on the back of the PC.

**3** Plug the other end of the USB cable into the USB port on the right side at the bottom.

- PC may temporarily malfunction if you unplug the USB cable from PC while yepp Explorer is initiating or executing a command.
- USB driver is installed a message saying that it is searching for a new device. If USB driver is not installed, try one more time after rebooting PC.

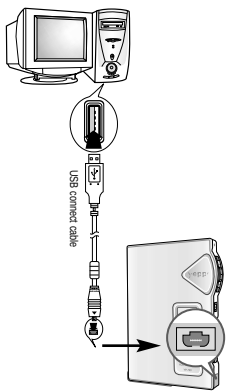


**4** When USB driver is not Installed automatically, refer to next page.

**5** When USB driver is installed, "**SAMSUNG YP-700**" will appear in **[System Properties]** → **[Device Manager]** as shown in the picture on the right.

**Note :**

How to check USB driver

Windows 98,ME:
**Control Panel → System → Device Manager**
Windows 2000:
**Control Panel → System → Hardware → Device Manager**
Windows XP:
**Control Panel → System → Hardware → Device Manager**

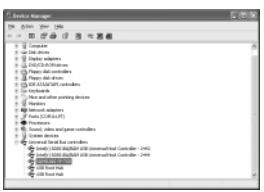

# Manual Installation of USB Driver

Continued...

If yepp does not communicate with PC (USB driver can't be installed automatically), turn on the power of yepp and connect yepp to PC, install USB driver manually (How to check USB driver : refer to page 41)

## In Windows XP

**1** Connect yepp to PC.
The window shown below appears.
Select **[Install from a list or specific location (Advanced)]** and click **[Next]**.

**2** Insert Installation CD into CD-ROM drive.
Select **[Search removable media (floppy, CD-ROM...)]** and click **[Next].**

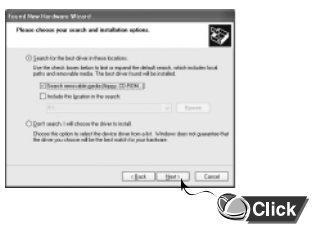


**3** Sometimes a POP-UP window including the attention shown below appears.
This software does not impair or destabilize the correct operation of your system.
Click **[Continue Anyway]**

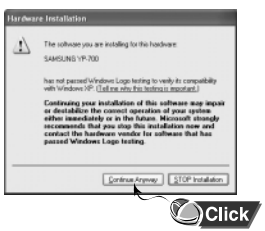


● If a message asking for the location of the source driver pops up, select the location and execute continuously.

**4** When Installation is completed, click **[Finish]**.

## In Windows 2000

Click **[Next]** button in the series of windows that appear.

Insert installation CD and select drive.

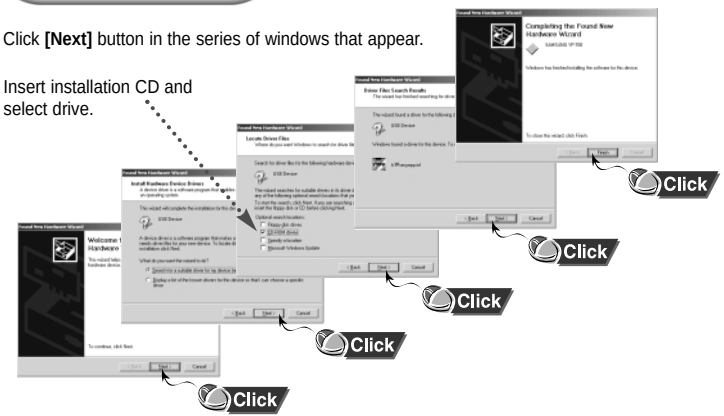


## In Windows 98

Click **[Next]** button in the series of windows that appear.

Insert installation CD and select drive.

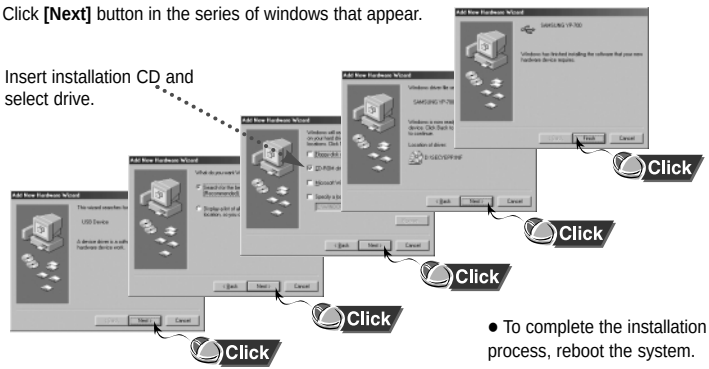


● To complete the installation process, reboot the system.

# Connecting yepp to Mac

Continued...

## System Requirements.

- Mac (9~10)
- 20MB of available hard disk space
- CD-ROM drive
  (double speed or greater)
- USB port supported
- iTunes 1.1/1.2

- If it has not been previously installed, install it from Apple's Installation CD.
- This unit will work on Mac with iTunes 1.1/1.2 only.

Before connecting yepp to Mac, make sure to install the iTunes plugin.

### Installing software

**1** Insert the Installation CD into CD-ROM drive. The window shown below appears. Double-click YP-700 iTunes Installer in Installation CD.

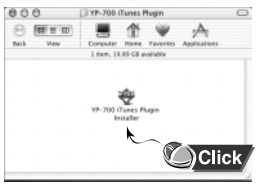


**2** Double-click Installation program, and screen below appears. Click **[Continue]**.

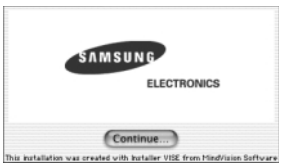


**3** Click **[Install]**and Installation starts.

**4** When Installation is completed, restart system if operating in Mac OS 9. In Mac OS X, you have no need to restart system.

## Connecting yepp to Mac with USB cable

**1** Insert the battery into yepp and turn on the yepp.

**2** Plug one end of the USB cable into the USB port on the back of the Mac.

**3** Plug the other end of the USB cable into the USB port on the right side at the bottom of the yepp.

- Mac may temporarily malfunction if you unplug the USB cable from Mac while iTunes is initiating or executing a command.

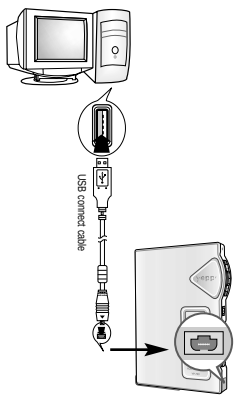


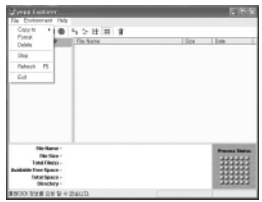

## File Menu

| | |
|---|---|
| Copy to | To copy files between the computer and yepp |
| Format | To format the memory of yepp |
| Delete | To delete files in the memory |
| Stop | To stop a command for copying files from the computer to yepp |
| Refresh | To display the current files saved in yepp |
| Exit | To end yepp Explorer |

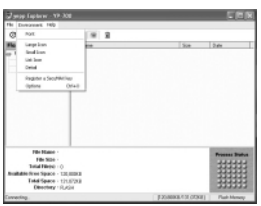

## Environment Menu

| | |
|---|---|
| Font | To change the font for displaying information on the list of files in yepp Explorer. |
| Large Icon/Small Icon List Icon/Detail | To change display type of the list of files in Explorer. |
| Register a SecuMAX key | To register a “SecuMAX key”. |
| Options | You can change voice file transfer type and USB setting. |

# Copying Files to yepp (PC)

Before copying files, turn on the yepp and connect yepp to PC.

**1** Run yepp Explorer

● Double- click yepp Explorer icon on your desktop.

**2** Select **[File]→[Copy to]→[Flash Memory]** / **[SmartMedia Card]**

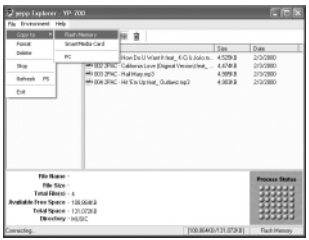

**3** After selecting files to copy to yepp, click **[Open]**.

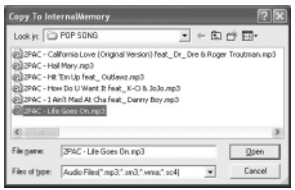
Copy To InternalMemory
Look in:
POP SONG
2PAC - California Love (Original Version) feat_ Dr_ Dre & Roger Troutman.mp3
2PAC - Hail Mary.mp3
2PAC - Hit 'Em Up feat_ Outlawz.mp3
2PAC - How Do U Want It feat_ K-Ci & Jo3o.mp3
2PAC - I Ain't Mad At Cha feat_ Danny Boy.mp3
2PAC - Life Goes On.mp3
File name:
2PAC - Life Goes On.mp3
Open
Files of type:
Audio Files(*.mp3;*.sm3;*.wma;*.sc4)
Cancel

**4** Click **[Copy]**
(You can select the font you want before copying.)

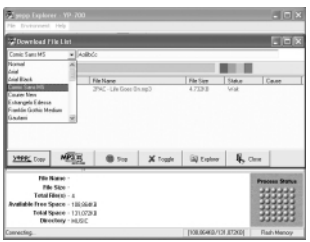

Do you want to save more songs?
You can use the 2X MP3 function to compress MP3 files. Here is a 2X MP3 function to downsize MP3(refer to next page)

**Note :**
Total memory size depends on physical characteristics of flash memory.

**Note :**
- An 128Kbps file uses about 1MB of memory per minute.
- Directories are divided according to file extensions(.mp3,.VOC...). Open the directory to check the saved file.
- Do not insert or take out the SmartMedia Card while a file is being transferred.
- You can't download files to yepp in FM mode.

# Downsizing MP3

2X MP3 is needed when there is not enough memory space to save more songs.

**1** Before copying, click the button.

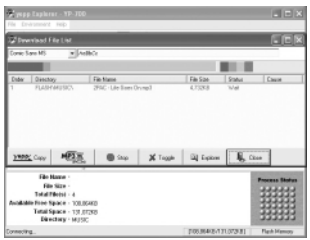

**2** First, select minimum sound quality you want to hear. Displayed minimum file size depends on selected value.

- If selected value is bigger than remaining memory, convertible maximum file size is displayed only.

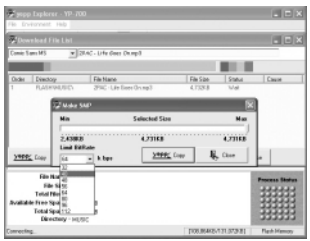

**3** Move scroll bar with mouse to adjust the file size. Current file size is displayed at center.

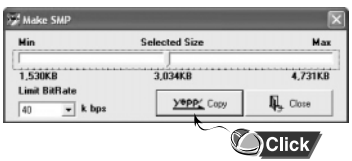


**4** After converted to 2X MP3, files are copied to yepp.

- 2X MP3 can't be saved on PC.

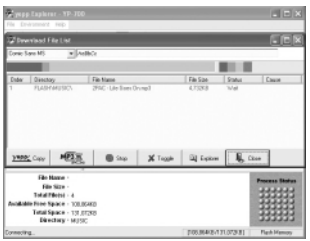

**Note :**

- File types that can be converted to 2X MP3:
  Normal formatted MP3 that has sampling frequency of 22.05KHz or 44.1KHz
  (WMA and SM3 can't be converted to 2X MP3)
- 2X MP3 is not available on Mac.

# Copying Files to yepp (Mac)

Before copying files to yepp, execute iTunes.
Connect yepp to Mac, turn on the yepp and then proceed.

**1** To copy files to yepp, Drag & drop files to iTunes.

**2** Files are saved. Now you can listen to music with yepp after removing the USB cable.

**Note :**
Total memory size depends on physical characteristics of flash memory.

**Note :**
- An 128Kbps file uses about 1MB of memory per minute.
- Do not insert or take out the SmartMedia Card while a file is being transferred.
- You can't download files to yepp in FM mode.

# Deleting Files (PC)

Before deleting files, turn on the yepp and connect yepp to PC.

**1** Run yepp Explorer.

**2** Select files to delete.

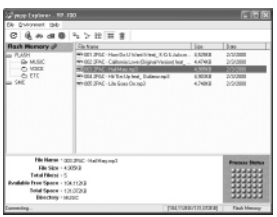

**3** Click **[File]→[Delete]**.

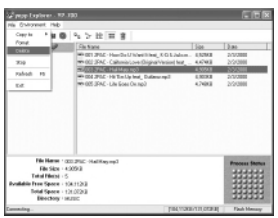



# Deleting Files (Mac)

Before deleting files, execute iTunes.
Connect yepp to Mac, turn on the yepp and then proceed.

**1** Run iTunes.

**2** Select a file to delete.
It can be deleted one at a time.

**3** Press the “Delete” button on keyboard.

# Formatting (PC)

Before formatting, turn on the yepp and connect yepp to PC.

**1** Run yepp Explorer.

**2** Click **[File]→[Format]**.

# Formatting (Mac)

Before formatting, execute iTunes.
Connect yepp to Mac, turn on the yepp and then proceed.

**1** Run iTunes.

**2** Click ( ) on iTunes.

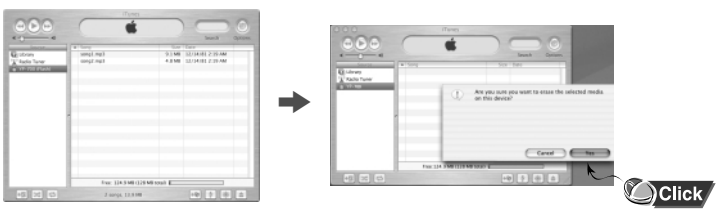


**Note :**
All files will be deleted when formatting memory.

# Uploading Files (PC)

Before uploading files, turn on the yepp and connect yepp to PC.

**1** Run yepp Explorer.

**2** Select files to upload and click **[File]→[Copy to]→[PC]**.

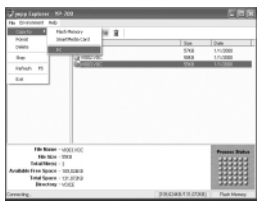

**3** Select the folder in the computer to save the files in.

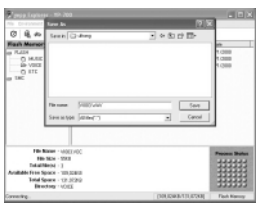

✻ In case of uploading VOC, it is saved in WAV.

**Note :** Due to the copyright law, MP3 and WMA, SMP, SM3 files can't be transferred to PC.



# Uploading Files (Mac)

Before uploading files, execute iTunes.
Connect yepp to Mac, turn on the yepp and then proceed.

**1** Run iTunes.

**2** Select files to save in Mac and Drag & drop files to folder to want to save.

✻ In case of uploading VOC in Mac, it is saved in VOC.

# Rearranging Files

You can change the order that the files are played.

**1** Before rearranging files, turn on the yepp and connect yepp to PC.

**2** Run yepp Explorer.

**3** Select files to move.

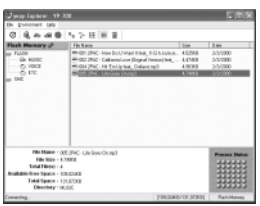

**4** Drag & drop the selected file to where you wish it to be.

**Note :** Files cannot be rearranged on the Mac.



# Installing CD Ripper

**Insert the Installation CD in the CD-ROM drive.**

Click **[Next]** button in the series of windows that appear.

Use it referring to **[?]** after executing CD Ripper.

**Note :** In Windows 2000 and XP, if ASPI (provided by Adaptec) has not been installed, you should install it. Windows displays "for Windows 98/NT",but you can use it in Windows 2000 and XP as well.

# Description of Buttons (yepp player)

| BUTTON | STATUS | PRESSING LENGTH | RESPONSE |
|---|---|---|---|
| ▶/■ | Power Off | | Power On, and play |
| | Play | | Stop(When no button is pressed for 5 seconds, yepp powers off automatically) |
| | MENU Mode | | Selection |
| | Voice Recording | | Pause |
| | Voice Recording Pause | | Resume recording |
| | Intro Play | | Cancel Intro play and change to Normal play |
| ▶▶ | Play | Less than 1 second | Play the next track |
| | Play | Longer than 1 Second | Fast forward search in PLAY mode |
| | Stop | | Skip to the next track |
| | MENU Mode | | Move upward |
| ◀◀ | Play | Less than 1 Second | Within 5 seconds from the start: Plays the previous track<br>After 5 seconds from the start: Plays the current track from the beginning. |
| | Play | Longer than 1 Second | Fast reverse search in PLAY mode |
| | Stop | | Skips to the previous track |
| | MENU Mode | | Move downward |
| + | Play or Stop Mode | | Volume increase |
| − | Play or Stop Mode | | Volume decrease |
| MODE | Play | Less than 1 second | Set the starting point for loop function |
| | During Loop Setting | Less than 1 second | Loop mode |
| | Loop Mode | Less than 1 second | Cancel loop mode |
| | Stop | Less than 1 second | Changing modes (music↔voice) |
| | Play or Stop Mode | Longer than 2 Seconds | Enter MENU |
| | MENU Mode | | Exiting MENU |
| ● | Stop Mode | | Start to record |
| | While Recording | | Stop voice recording |
| | Memory Selection in Recording | | Select |

# MENU Table

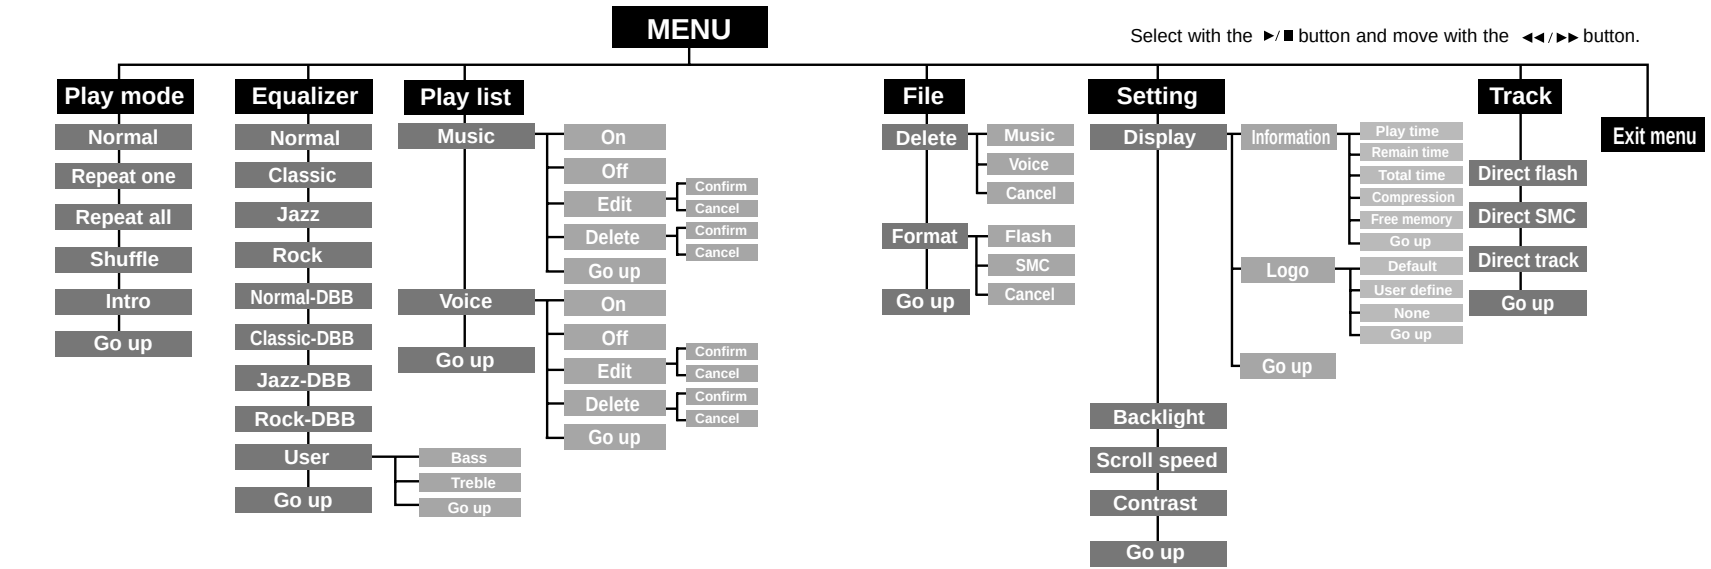
MENU
Select with the ►/■ button and move with the ◄◄/►► button.
Play mode
Normal
Repeat one
Repeat all
Shuffle
Intro
Go up
Equalizer
Normal
Classic
Jazz
Rock
Normal-DBB
Classic-DBB
Jazz-DBB
Rock-DBB
User
Bass
Treble
Go up
Go up
Play list
Music
On
Off
Edit
Confirm
Cancel
Delete
Confirm
Cancel
Go up
Voice
On
Off
Edit
Confirm
Cancel
Delete
Confirm
Cancel
Go up
Go up
File
Delete
Music
Voice
Cancel
Format
Flash
SMC
Cancel
Go up
Setting
Display
Information
Play time
Remain time
Total time
Compression
Free memory
Go up
Logo
Default
User define
None
Go up
Go up
Backlight
Scroll speed
Contrast
Go up
Track
Direct flash
Direct SMC
Direct track
Go up
Exit menu

# Precautions

- ✵ Keep yepp and all its parts and accessories out of the reach of small children.
- ✵ Do not use or store yepp in dusty, dirty areas as its components may be damaged.
- ✵ Do not drop or put weight on the unit.
- ✵ Make sure not to let water in yepp.
  - If it gets wet, remove the battery, dry it with towel and contact a service center.
- ✵ Keep out of humid, hot or magnetic places.
- ✵ Do not clean it with thinner, alcohol or benzene.



# Troubleshooting

**Software does not work.**
- Refer to pages 38, 46.(computer environment)

**yepp does not work and the LCD displays nothing.**
- Check the battery capacity
- Check to see if the battery is inserted correctly ( + / – )

**The buttons do not work.**
- Check to see if HOLD switch is set for HOLD.

**In PLAY mode, music is not played after pressing the ►/■ button**
- Check to see if MP3 or WMA files are saved in the built-in memory or SmartMedia card.

**Files cannot be downloaded.**
- Check to see if the driver is installed correctly in the computer.
- Check the connection between yepp and computer.
- Check and/or replace the battery, turn on the yepp.
- In FM mode,you can't connect yepp to computer. To connect yepp to computer, convert the yepp mode by pressing the remote controller MODE button.

**Backlight does not work.**
- Check the backlight setup.
- When the battery power is low, the backlight will go out.

**yepp keeps being turned off.**
- In Stop mode, the power is automatically turned off after five seconds.
- Check to see if there are files saved in it.

**Something's wrong with play time displayed during Play mode.**
- Check to see if it is playing VBR(Variable Bit Rate) files. VBR files are not fully supported.

**LCD window is dark**
- Check Contrast

**Files on the SmartMedia card are not recognized.**
- Check to see if SmartMedia card is inserted correctly. Push SmartMedia card into slot again.
- Format the SmartMedia card again and save files.

**Strange letters are displayed**
- Check the font set up.

# Security

You can get legal MP3 files from a growing number of Internet sites.

## What is SecuMax?

With the increasing amount of digital multimedia content, the content providers became concerned with the ease in which the content could be copied and distributed in violation of their copyrights. This matter required a system called SecuMAX for protecting copyrighted music and for using legal content conveniently.

- ◆ SecuMAX protects the copyrighted music against infringement.
- ◆ SecuMAX can be adapted to various types of digital contents.
- ◆ For further details on SecuMAX, please visit www.secumax.com

## Internet Site

www.cddb.com

- ● Music CD-related data is provided through the Internet from the CDDB™ Music CD Database.
- ● Copyright©1998 CDDB Inc. All rights reserved.

**Note :**

To listen to MP3 files encoded with SecuMAX, you must download the key file from the Internet and register it on the yepp' Explorer.

# Specifications

| | |
|---|---|
| **Model** | YP-700 |
| **Processor** | 74Mips RISC |
| **Built-in Memory capacity** | 192MB(YP-700i)/128MB(YP-700H)/64MB(YP-700S) |
| **Voltage** | 1.5V(AAA size alkaline battery)/1.2V(NI-MH Rechargeable battery) |
| **Playing time** | last 20hours ( A Rechargeable battery+AAA size alkaline battery) |
| **Demensions/Weight** | 54 X 87 X 14 mm/67g (without battery) |
| **Case** | Plastic/Aluminum |
| **File Transfer Speed** | Up to 5Mbps |
| **Noise Ratio** | 80dB with 20kHz LPF |
| **Earphones Jack Output Power** | 5mW @ 16 Ω |
| **Output Frequency Range** | 20Hz~20kHz |
| **Operating Temperature Range** | -5 ~ +35˚C (23 ~ 95F) |

## MEMO

## MEMO